

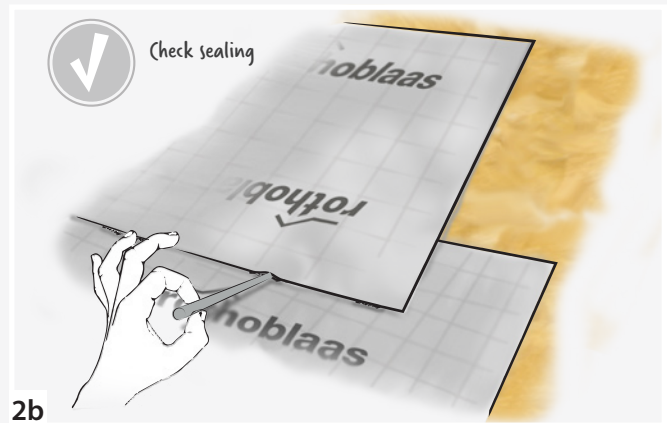
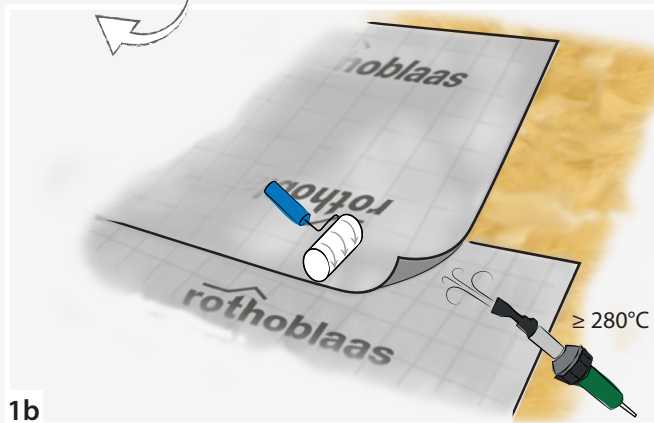
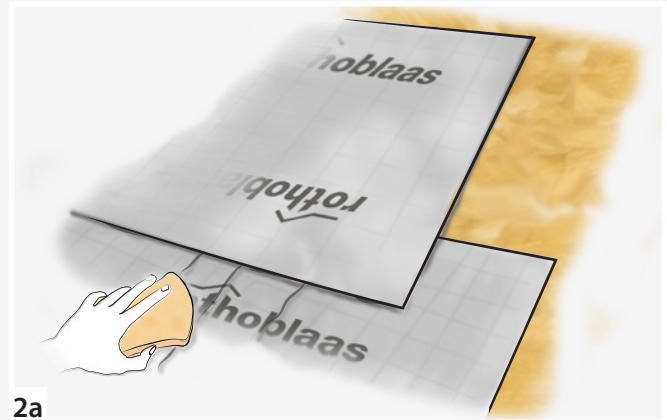
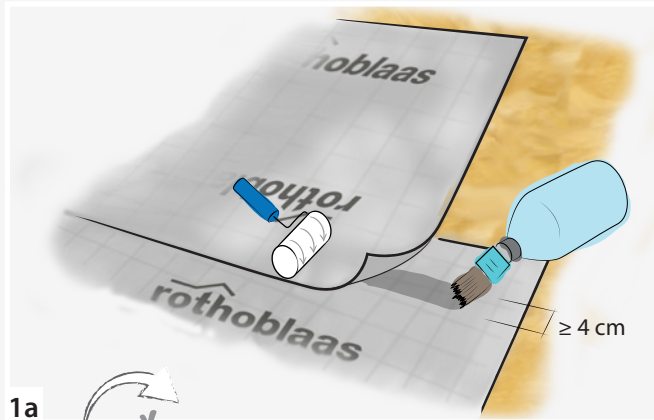




GENERAL METHODS FOR SEALING TRASPIR WELD EVO 360

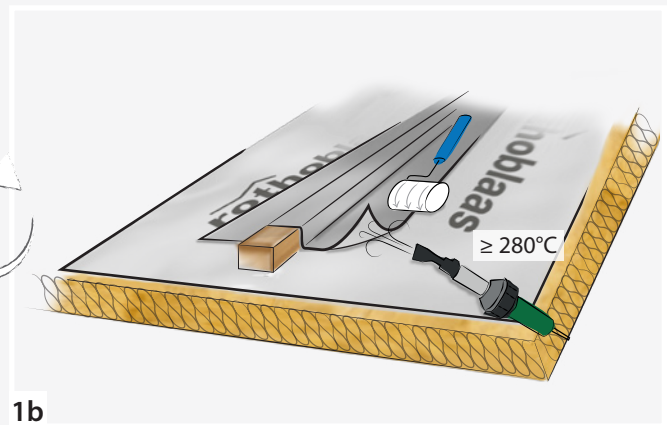

SOLUTION A: SEALING BATTEN WITH WELD STRIPE

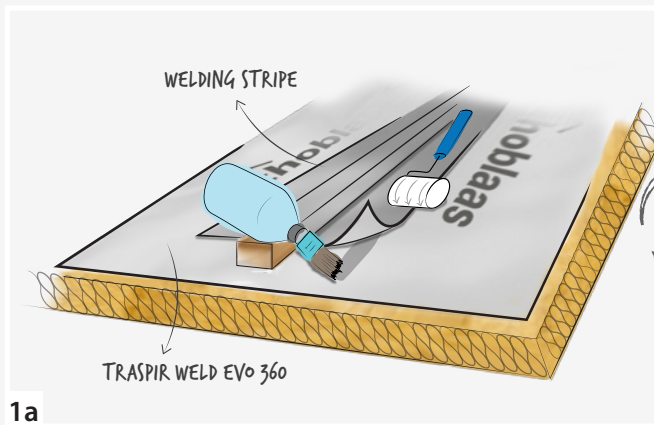


SOLUTION B: SEALING BATTEN WITH NAIL POINT TAPE

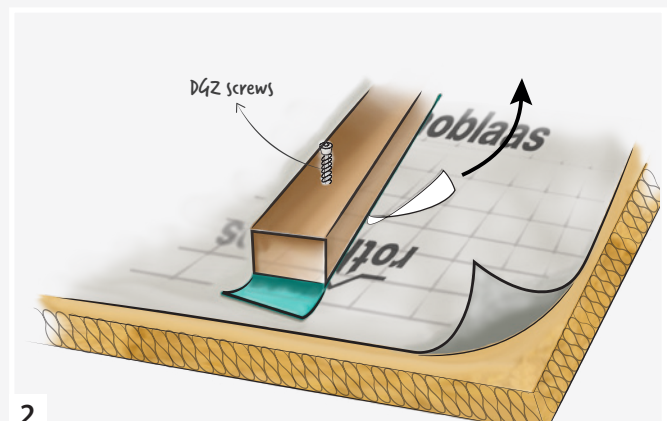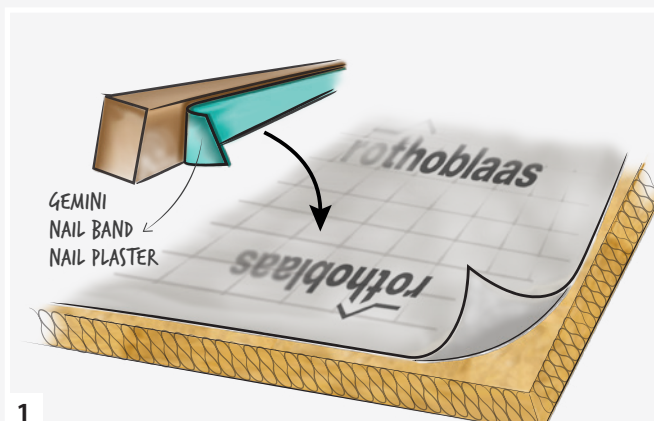

SEALING SLEEVE ON TRASPIR WELD EVO 360




1a

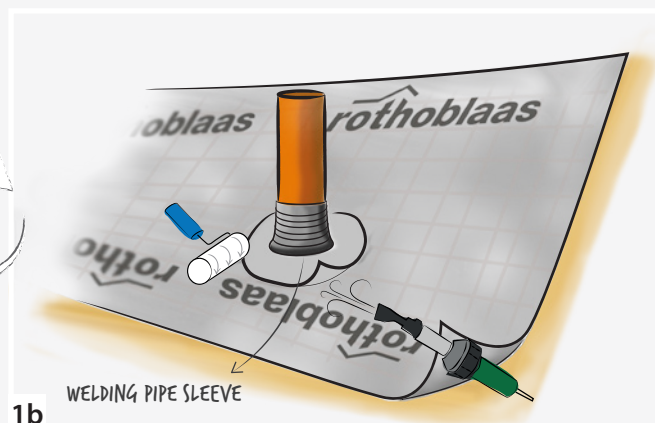


1b


SEALING CHIMNEY WITH TRASPIR WELD EVO 360

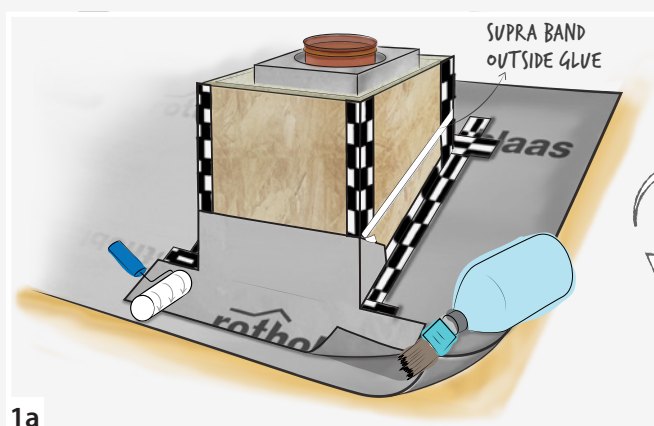


1a

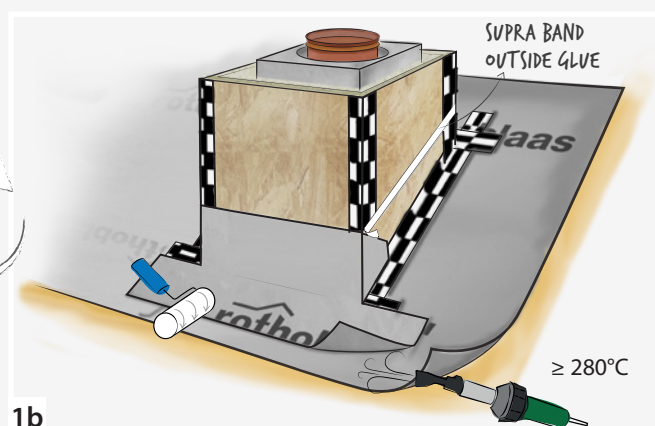


1b

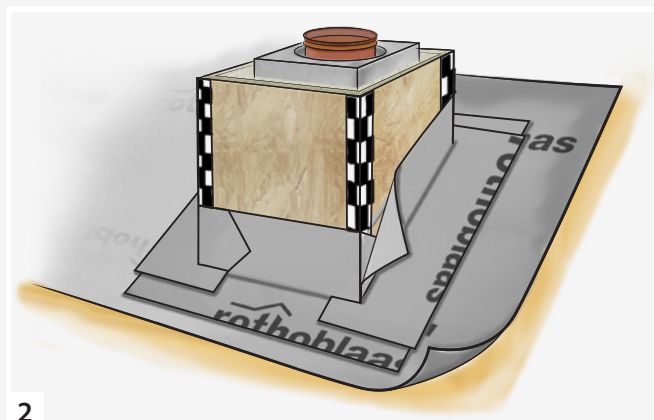


2

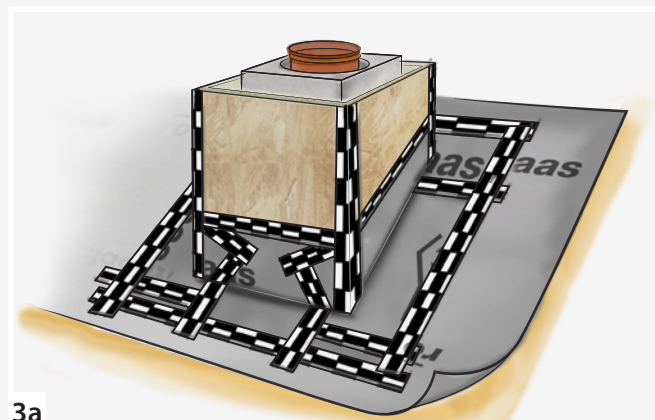

3a

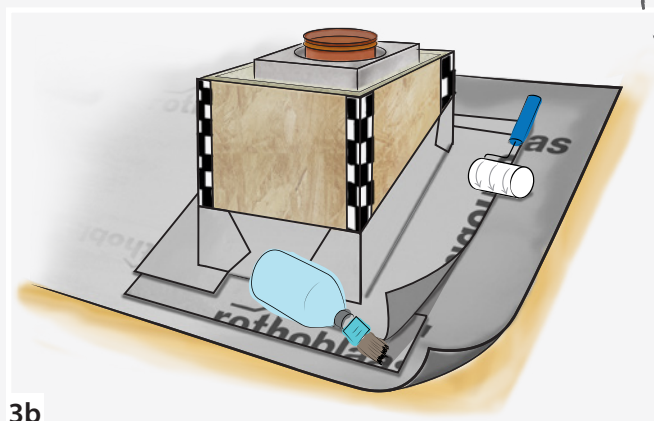

3b

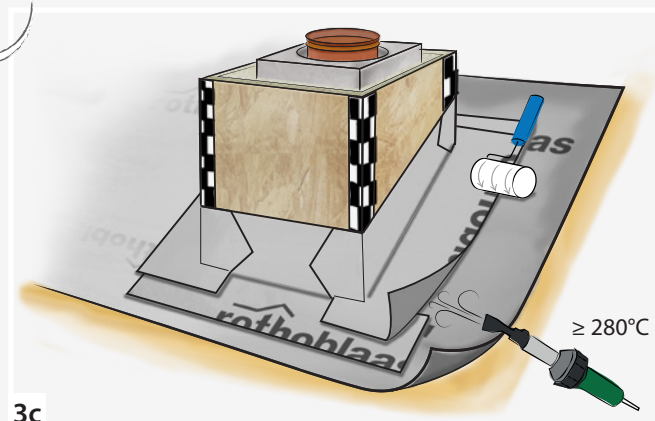

3c