

# THERMOWASHER


## Washer to fasten insulation to wood

Propylene system




### ANTI-THERMAL BRIDGE

Incorporated hole cover to avoid thermal bridges. Large cable spaces for proper plaster adhesion

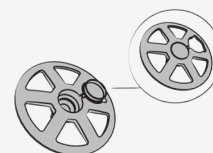

### SECURITY

Includes a system that impedes the unthreading of the screw; used with HBS screws with the CE mark

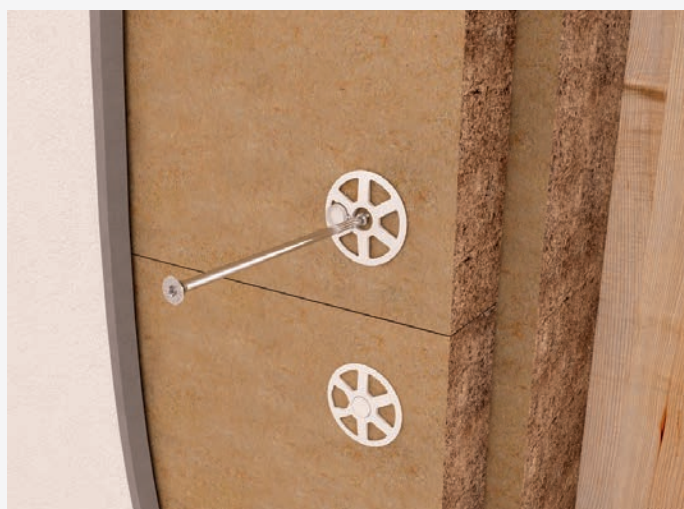

### CE FASTENING WITH HBS SCREWS

The thermowasher is intended for use with screws with the CE mark in accordance with ETA; ideal for Ø 6 or Ø 8 HBS screws, with lengths based on the thickness of the insulation to be fastened; recommended measures range from HBS 6x140 to HBS 8x500 mm

### UNIVERSAL FASTENING

The propylene Ø 65 washer is compatible with Ø 6 and Ø 8 screws; it is appropriate for any type of insulation and any type of thickness that can be fastened, from a minimum of 30 mm up to a maximum of 420 mm. For proper setting, the insulation manufacturer's instructions must be followed

## Codes and dimensions

| code          | d <sub>VITE</sub> [mm] | a x b x c [mm] | pcs/pckg |
|---------------|------------------------|----------------|----------|
| <b>D78202</b> | 6 e 8                  | 65 x 4 x 20    | 700      |